



DCA CONSTRUCTION PRODUCTS


Durajoint® EXPAND-Tite - Hydrophilic Waterstop

Preparation: Surface should be clean, dry and free of dust, rocks, rust, and all other constructions debris. Do not install Expand-Tite Waterstop in standing water or on icy substrate.

Apply Adhesive: Brush on Durajoint Primer/Adhesive or Apply a bead of Durajoint Construction Adhesive/Sealant to the contact surface. Be sure to maintain the proper concrete coverage distance while applying primer/adhesive (3" Minimum).

Installation: Remove protective paper backing and discard. Using the heel of the hand and moderate pressure, press Expand-Tite Waterstop firmly into primer/adhesive on the standing structure. Check that the waterstop has properly bonded. For overhead installation hold for 15 seconds or more to ensure a proper bond.

Joining Ends: To splice the ends and form a continuous seal, overlap the ends together by 2"-4". Gently knead the two ends, creating an uninterrupted seal. Keep joints away from corners.

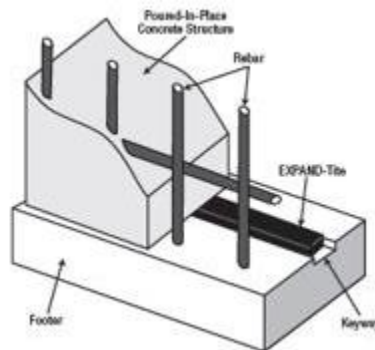

Waterstop • Forming Accessories • Rebar Supports • Mesh Supports • Prestressed Accessories

DCA Construction Products, 10421 Industrial Dr. • Garrettsville, OH 44231 • (888) 833-8308 (Toll-Free) • (330) 527-4308 • Fax:(330) 527-2440 • www.durajoint.com

Made in America  U.S. Veteran Owned